




SAFETYSTEP

ANTI-SLIP INLAY STRIP APPLICATION

ALWAYS USE PROTECTIVE CLOTHING INCLUDING GLOVES WHEN HANDLING CHEMICAL



1. Ensure routed section of timber is clean of dust, shavings and is dry
2. Using an MEK or methylated spirits type product, wipe down the back of the insert material.

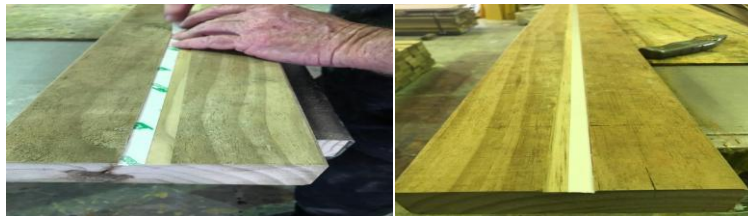

3. Place 10mm double sided tape to the outer edge of routed section, press firmly then remove top protective layer of tape



4. Apply small continuous line of additive to inner side of routed section ensuring there are no gaps. The line of adhesive should be no more than 3mm wide as pictured on left. Too much will result in adhesive spilling out from the edge when curing occurs, pictured on right.



5. Place Insert Strip into routed section as above, laying from inner edge first.



6. Using a roller or similar tool, roll over insert firmly and continuously



7. Set to one side and after several minutes check for any growth of the adhesive around the other edges of insert. If there is growth, clean off with clean cloth soaked in MEK or methylated spirits.



19B Neil Park Drive, East Tamaki

Phone: 09 271 4355